LANBS23505 Installation Instructions

Lankota Upper Feeder House Brush Kit for JD® 60 (-720x00) Series Wide Body Level Land Combines

(Also Fits Updated 00, 10, 50 Series JD® Combines)

LANCOTA

270 West Park Avenue Huron, SD 57350 866-526-5682

Numerical Parts List

Part Numbers	Description	Qty
LANBS6FD01	Brush	1
LANBS6FD02-03	Brush Holder - (Long) Bottom	1
LANBS6FD02-04	Brush Holder - (Long) Top	1
LAN204552	Shield Drum Wide	1
LANBS22489-02	Brush Spacer	1
LAN204K	5/16-18 x 1" Carriage Bolt	6
REDKRJ8	5/16-18 Top Lock Nut	8
LAN3B16A16	5/16" x 1 1/4" Hex Bolt	2
LAN1133	5/16" Flat Washer	2

Preparation

- 1. Remove head from combine if one is attached.
- 2. Raise the feeder house and lower the safety stop on the feeder house cylinder.
- 3. Set the parking brake on the combine.
- 4. Turn off the combine engine and remove the key.

Pictorial Parts List




Kit Installation

Refer to Figure 1 & 2

- Remove the original center upper feeder house shield and replace it with the new upper feeder house shield LAN204552.
- 2. Using the brush spacer (LANBS22489-02) on the front of the upper feeder house shield as a template, mark the outside shields through the last hole on both ends.
- 3. Drill the marked holes through the outside shields with a 3/8" drill bit.



Figure 1

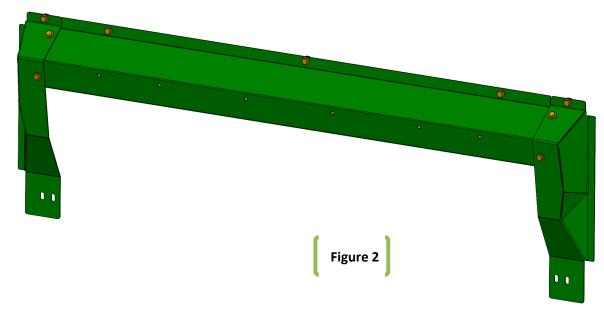


Kit Installation

Refer to Figures 2 - 4

- 4. Remove the upper feeder house shield (LAN204552) from the combine.
- 5. Install the brush on the back of shield as shown below; use the provided 5/16" x 1" carriage bolts (LAN204K) and top lock nuts (REDKRJ8). Use the brush spacer (LANBS22489-02) to space the stainless brush holders off the back of the shield.



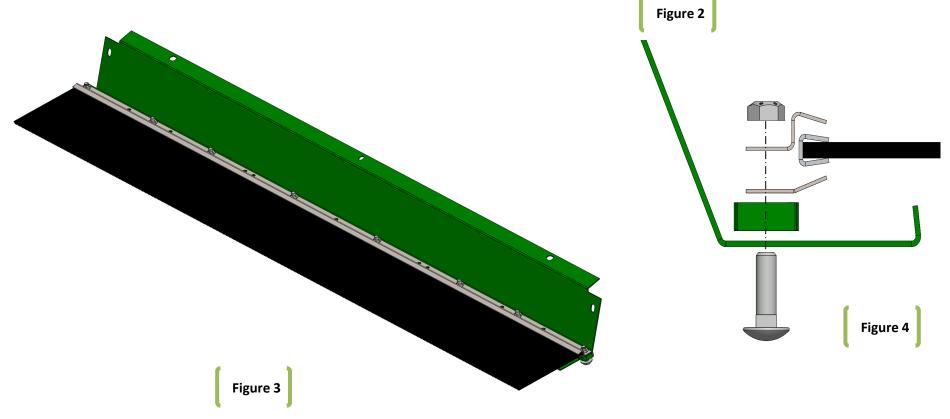

Kit Installation

Refer to Figure 5

- 6. Install the previously assembled upper feeder house shield and brush.
- 7. Re-attach the original side shields.
- 8. On each end, through the previously drill hole in the side shields, bolt through the side shields, brush spacer and stainless brush holders with a 5/16" x 1 1/4" hex bolt (LAN3B16A16), 5/16" flat washer (LAN1133) and 5/16" lock nut (REDKRJ8).

For further technical assistance,

Call Lankota Inc. at:

1-866-526-5682

