

# LANPSP700K & LANPSP700EK

## Installation Instructions

John Deere 600 Series Poly Corn Head Snout Protectors

**FOR HEADERS WITH 20" OR 22" SPACING ONLY**

# LANKOTA<sup>®</sup>

**270 West Park Avenue**

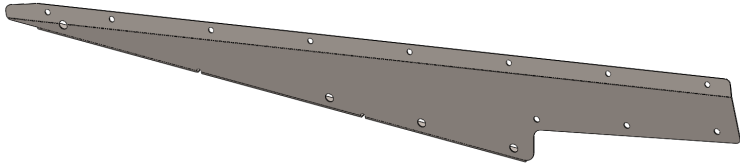
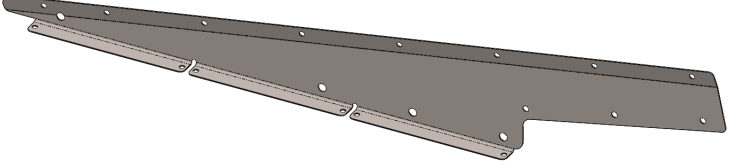
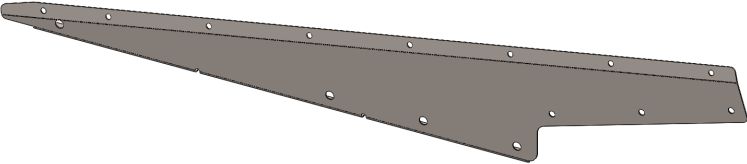
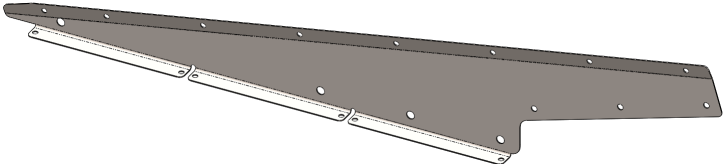
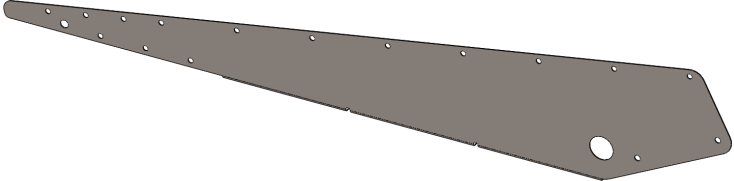
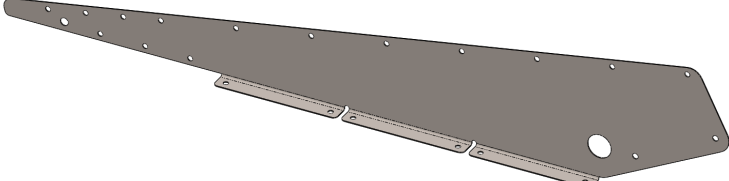


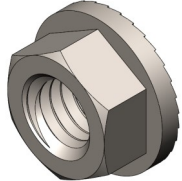
**Huron, SD 57350**

**866-526-5682**

# Numerical Parts List

<b>Part Numbers</b>	<b>Description</b>	<b>Quantity</b>
<b>LANPSP700K</b>		<b>1 per row</b>
LANPSP701L	Poly Snout Protector – Left Side	1
LANPSP701R	Poly Snout Protector – Right Side	1
<b>LANPSPBH</b>	<b>Bag of Hardware</b>	<b>1</b>
LAN030114048	3/4" Phillips Pan Head Screw	24
LAN001AB18A32	3/8" x 1-1/2" Pan Head Bolt	2
LAN3718	3/8" Serrated Lock Nut	2
<b>LANPSP700EK</b>		<b>1 per head</b>
LANPSP702L	Poly Snout Protector End Row – Left Inside	1
LANPSP702R	Poly Snout Protector End Row – Right Inside	1
LANPSP703L	Poly Snout Protector End Row – Left Outside	1
LANPSP703R	Poly Snout Protector End Row – Right Outside	1
<b>LANPSPBH</b>	<b>Bag of Hardware</b>	<b>2</b>
LAN030114048	3/4" Phillips Pan Head Screw	24
LAN001AB18A32	3/8" x 1-1/2" Pan Head Bolt	2
LAN3718	3/8" Serrated Lock Nut	2

# Pictorial Parts List

 <p>LANPSP701L</p>	 <p>LANPSP701R</p>	
 <p>LANPSP702L</p>	 <p>LANPSP702R</p>	
 <p>LANPSP703L</p>	 <p>LANPSP703R</p>	
 <p>LAN030114048</p>	 <p>LAN001AB18A32</p>	 <p>LAN3712</p>

# Preparation

If header is installed on combine:

1. Raise header to proper height for installation of kits.
2. Turn combine engine off.
3. Set parking break.

# Installation

*Refer to Figure 1*

1. Remove the factory black wear plates on the inside of the R/H end snout. Retain all hardware for later use. Make sure bushings stay in place.

*Refer to Figure 2*

2. Install end row inside snout protector (LANPSP702R) to inside of R/H end snout. Attach using seven of the stainless steel screws, one bolt and one nut from the LANPSPBH bag of hardware and the factory six bolts and nuts previously removed.
3. Repeat on L/H side of head with LANPSP702L.



Figure 1

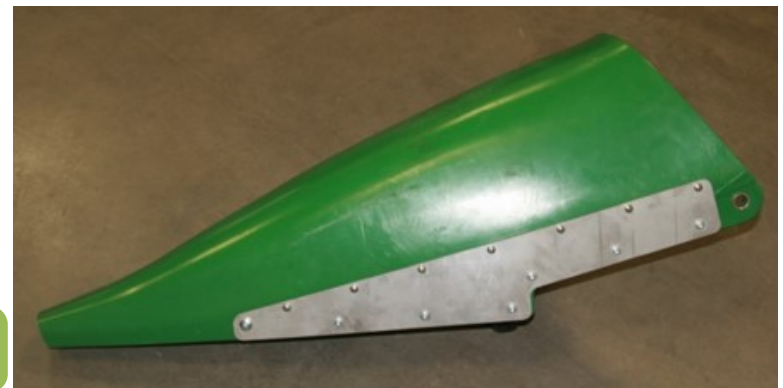


Figure 2

# Installation

4. Install end row outside snout protector (LANPSP703R) to outside of R/H end snout using thirteen of the stainless steel screws, one bolt and one nut from the LANPSPBH bag of hardware.
5. Repeat on L/H side of head with LANPSP703L.

*Refer to Figures 3 & 4*

6. Remove the factory black wear plates from both sides the remaining middle snouts. Retain all hardware for later use. Make sure bushings stay in place.
7. Install standard snout protectors (LANPSP701L & R) to the corresponding side of the remaining snouts using seven of the stainless steel screws, one bolt and one nut from the LANPSPBH bag of hardware and the factory six bolts and nuts previously removed.



Figure 3

Figure 4



**For further technical information,  
contact Lankota Inc. at:  
1-866-526-5682**