

LANSS2600XO

Installation Instructions

Lankota GENERATION II Stalk Stomper® Mounting Kit for CaseIH® 2600 Series Corn Heads

2-Row Coverage

LANKOTA®

**270 West Park Avenue
Huron, SD 57350
866-526-5682**

Numerical Parts List

Part Numbers	Description	Quantity
LANSS2606L	Left Row Mount	1
LANSS2606R	Right Row Mount	1
LANSS704	Twist Pin	2
LAN2600UBOLT	U-bolt 5/8" x 4.125" ID x 5.5" Long	4
LAN690830	5/8" Serrated Flange Nut	8

Pictorial Parts List

		
LANSS2606L (1)	LANSS2606R (1)	LAN2600UBOLT (4)
		
LANSS704 (2)	LAN690830 (8)	

Preparation


1. Attach desired header to the combine. Lock the head to the combine.
2. Raise the head off the ground and lower the safety stop on the feeder house cylinder.
3. Set the parking brake on the combine.
4. Turn off the combine engine and remove the key.

Installation

Refer to Figure 1

1. Remove the formed covers beneath the row unit gear box.

Figure 1

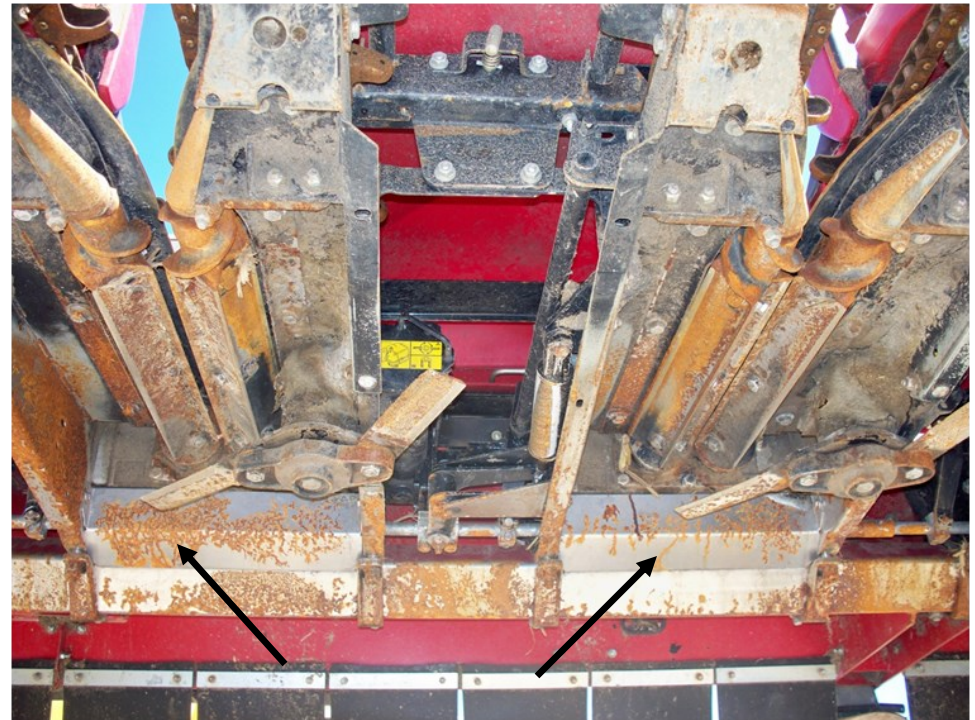

Refer to Figure 2

2. Mount the stalk stomper bracket (LANSS2606L or R) directly to the square tube beneath the row unit.

Hardware:

LAN690830	5/8" Serrated Flange Nut
LAN2600UBOLT	4" U-bolt

Refer to Figure 3

3. Slide Stalk Stomper onto mounting bracket and secure with provided hitch pin.

Figure 2

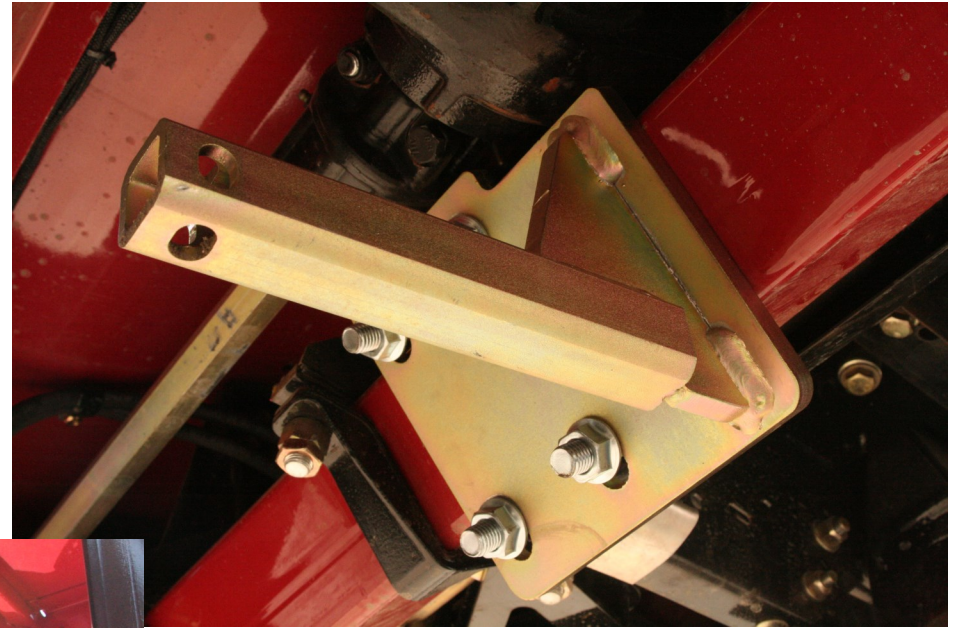


Figure 3



For further technical assistance,

Call Lankota Inc. at:

1-866-526-5682

Stalk Stomper Disclaimer

Stalk Stomper Disclaimer

The most effective use of the Lankota Stalk Stomper® is achieved by adjusting the stomper pad so that when the corn head is at its normal cutting height, the pad of the shoe is 1" above the ground. Over compression of the spring can shorten the life of the stomper spring, increase wear on the poly liner, and may result in undue damage NOT covered by Lankota's Limited Warranty.