

# LAN84108G

## Installation Instructions

Adapts Model Year 2010 and older **Geringhoff** Corn Heads (Non-Folding) to Single Point Hook Up

# LANKOTA®

**270 West Park Avenue**

**Huron, SD 57350**

**866-526-5682**

# Numerical Parts List

<b>Part Numbers</b>	<b>Description</b>	<b>Quantity</b>
LAN166992A	Multi-Coupler w/ 1 Small	1
LAN204828BLK	Mounting Bracket (BLACK)	1
LANX1JS43-6-4*	Hydraulic Adapter	1
LAN44302*	Zip Ties	4
LAN18A*	3/8" x 1.0" Carriage Bolt	4
LAN3718*	3/8" Serrated Lock Nut	4

*\*included in bag of hardware.*

# Pictorial Parts List

					
LANX1JS43-6-4 (1)*	LAN44302 (4)*	LAN18A (4)*	LAN3718 (4)*	LAN204828BLK (1)	LAN166992A (1)

# 1. Mounting Storage Bracket for Single Point Coupler

Refer to Figure(s) 1.1 & 1.2

- 1.1 Place multi-coupler block (with cut hoses attached) into storage bracket (LAN204828BLK)
- 1.2 Position storage bracket on left side of feeder house opening on header. Locate an open area that will not interfere with drive shaft storage. Allow for adequate hose and electrical cable length for the multi-coupler.
- 1.3 Mark ONE hole on the storage bracket and drill hole using 3/8" bit.
- 1.4 Align storage bracket to run parallel to top beam mark and drill other 3 holes.
- 1.5 Secure bracket with carriage bolts (LAN18A) and nuts (LAN3718).

Figure 1.1

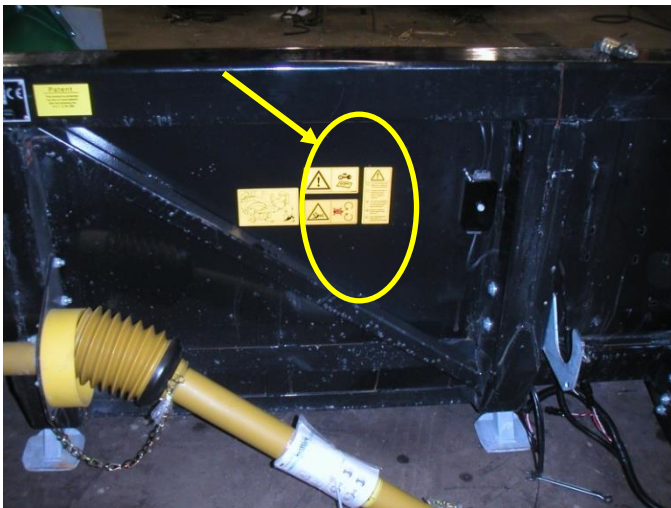


Figure 1.2



## 2. Installation of Multi-Coupler Block

Refer to Figure(s) 2.1, 2.2 & 2.3

- 2.1 Remove female hose fitting from hydraulic hose on corn head by simply cutting the hose at the base of the fitting as shown below.
- 2.2 Insert fitting (LANX1JS43-6-4) into cut end of hose and crimp for a leak-free, secure fit. Attach new hose to coupler valve on Multi-Coupler Block (LAN166992) and tighten fitting.
- 2.3 Secure any loose and hanging hoses with provided zip ties (LAN44302)\*.
- 2.4 Place the Single Point Connector into the storage bracket.

Figure 2.1



Figure 2.2

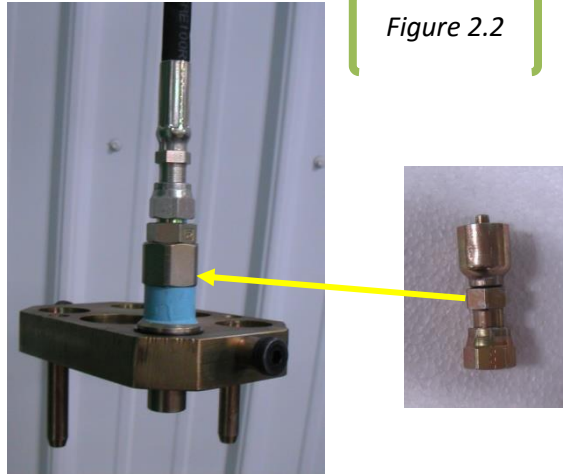


Figure 2.3



For further technical information, you may call Lankota Inc: 1-866-526-5682