

LANKOTA UNLOADING AUGER TIPPY SPOUT



Top off your grain carts and trucks without moving your combine side to side. This system's electric actuator tips the combine unloading auger away from the combine or closer to the combine by pressing a foot switch in the combine cab. *Currently available for John Deere® combines with high unload rate (HUR) augers.*



LANKOTA[®]
Ag Driven Innovations

☎ 866.526.5682
605.352.4550

📍 270 West Park Avenue
Huron, SD 57350

🌐 www.lankota.com



When unloading begins, the fully automated kit will automatically tip the spout to the normal unload “neutral” position. During the unloading process, the operator can manually change the angle of the spout on the fly. When unloading is complete, the spout will automatically lower to allow any remaining grain to drop out of the boot, then fully raise to the storage position.

LANKOTA UNLOADING AUGER TIPPY SPOUT



LANKOTA[®]
Ag Driven Innovations

☎ 866.526.5682
605.352.4550

📍 270 West Park Avenue
Huron, SD 57350

🌐 www.lankota.com