

LAN84SSH

Installation Instructions

Adapts Shelbourne Stripper Head to Single Point Hook Up on 60, 70 & 'S' Series John Deere Combines


LANKOTA®

270 West Park Avenue
Huron, SD 57350
866-526-5682

Numerical Parts List

Part Numbers	Description	Qty
LAN166996A	Multi Coupler Block with 1 Large Yellow Coupler	1
LAN204828BLK	Black Bracket	1
LAN175880	Snap Ring	1
LAN5250906	Electrical Wire Harness (EC300)	1
LAN202412	1/2" Hydraulic Hose with Fittings	1
LAN18A	3/8" x 1" Carriage Bolt	4
LAN3718	3/8" Serrated Flange Nut	4
LAN44302	Zip Tie	4

Pictorial Parts List

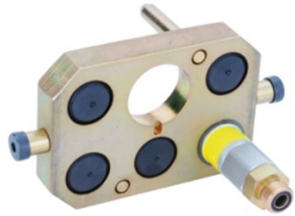

LAN166996A (1)



LAN204828BLK (1)



LAN175880 (1)



LAN5250906 (1)



LAN202412 (1)



LAN18A (4)



LAN3718 (4)




LAN44302 (4)

Kit Installation

Refer to Figure 1

1. Attach swivel end of Hydraulic Hose (LAN202412) to hydraulic valve on back side of multi-coupler block (LAN166996). Tighten and secure.
2. Attach male "poppet" end of hose to female connector on header to complete hydraulic connection.
3. Install electrical harness (LAN5250906) in block using snap ring (LAN175880). Connect "twist" end of harness to harness on header.

Figure 1

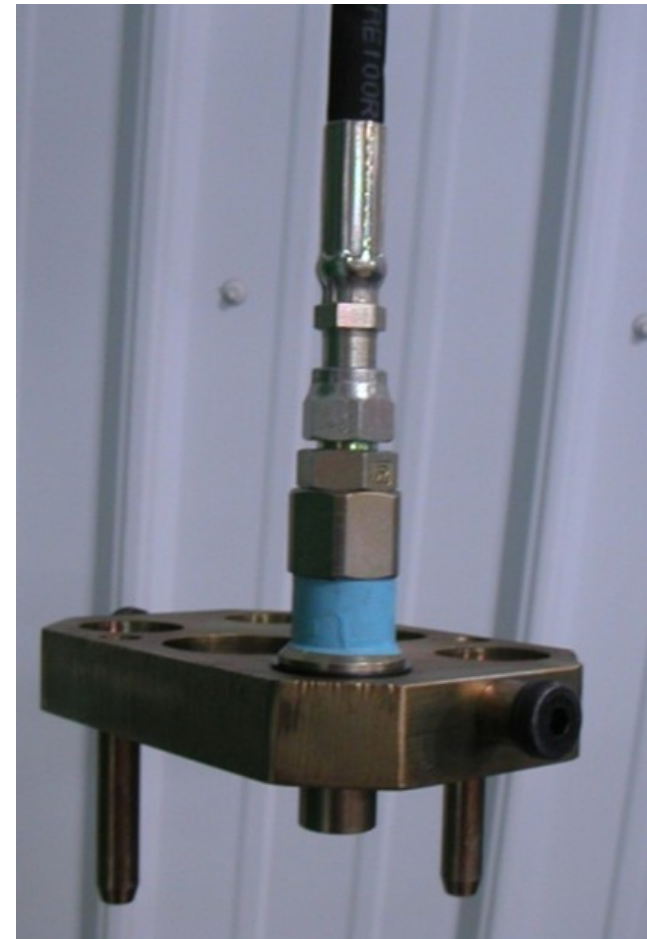

Kit Installation

Refer to Figure 2

4. Place multi-coupler block (with hoses attached) into storage bracket (LAN204828S).
5. Find suitable location for the storage bracket in the area shown.
 - Be sure to find a spot that does not stretch the hoses too tight.
6. Mark one hole on the storage bracket and drill hole using 3/8" bit.
7. Align storage bracket to run parallel to top beam of head. Mark and drill the other 3 holes.
8. Secure bracket with (LAN18A) carriage bolts and nuts (LAN3718).
9. Secure any loose and hanging hoses with the provided zip ties.
10. Place the Single Point Connector into the storage bracket to hold the single point connector in place.



Figure 2

For further technical assistance,

Call Lankota Inc. at:

1-866-526-5682