

LANMF24542

Installation Instructions

Fender Lift Kit for 6xxR & 4xxR Series John Deere Sprayers with Narrow Fenders

(Set of 4)

LANKOTA®

270 West Park Avenue

Huron, SD 57350

866-526-5682

Numerical Parts List

Part Numbers	Description	Qty
LANMF31	Fender Mount	8
LANF06FP	3/8" x 1.25" SS Hex bolt	16
LANF091A	3/8" SS Hex Nut	16
LANF05XZ	3/8" SS Lock Washer	16
LANF05SQ	3/8" SS Flat Washer	32
LAN19M7785	M10 x 25mm Flanged Hex Bolt	8


Pictorial Parts List

		
LANMF31 (8)	LANF06FP (16)	LANF091A (16)
		
LANF05XZ (16)	LANF05SQ (32)	LAN19M7785 (8)

Kit Installation

1. Remove the hardware from a fender and its lower mount.
2. Install a bracket on the mount with the removed hardware. The bracket should point UP and BACK as shown.
3. Attach the fender to the bracket with the provided stainless hardware.
4. On the upper mounting arm, remove the mounting hardware and lift the fender.
5. Install a bracket with the M10 x 25mm bolts (LAN19M7785) provided. The bracket should also point UP and BACK.
6. Attach the fender to the bracket with the provided stainless hardware.
7. Repeat these steps on the other fenders.

Note: Lankota recommends using thread locking compound to prevent hardware from coming loose.

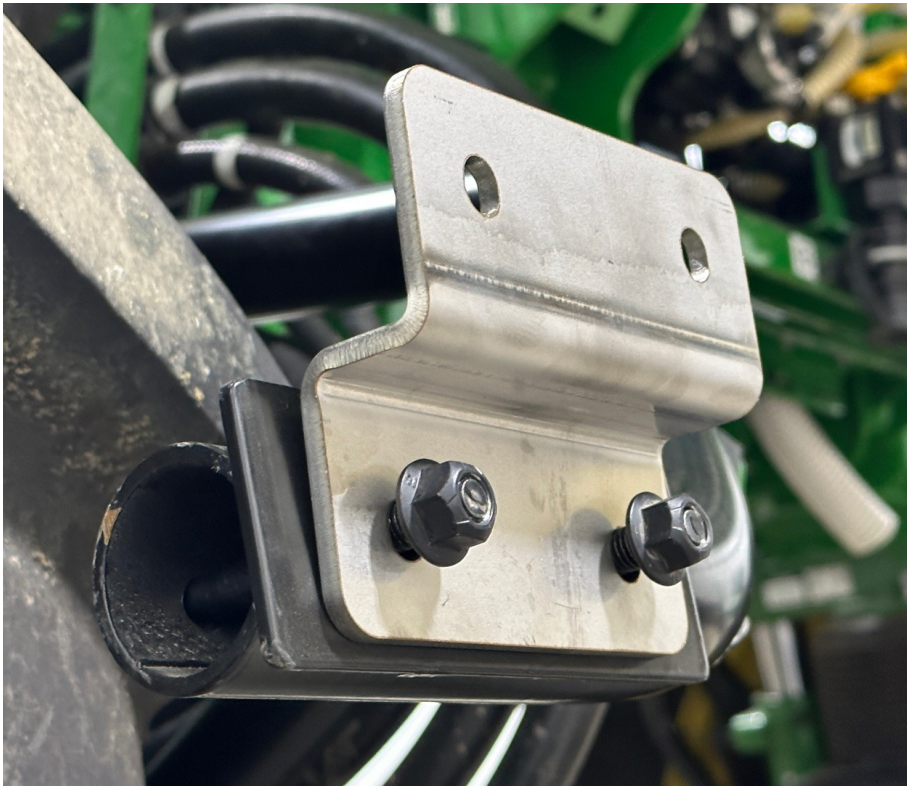

Kit Installation



During severe suspension compression events, it is possible for the rear fenders to contact the taillights. To make this impossible, switch the taillight arms, from side-to-side, so they are higher and unable to contact the fenders.

