

LAN1331SF

Installation Instructions

Lankota Shark Fin Kit for 2015 & 2016MY JD® 6XX Series Flex Draper Heads

LANKOTA®

**270 West Park Avenue
Huron, SD 57350
866-526-5682**


Numerical Parts List

Part Numbers	Description	Qty
LAN1331SF-W	Flex Draper Shark Fin	1
LANFB305	3/8"-16 x 1.25" Hex Bolt	2
LAN1618000	3/8" Nyloc Nut	2
LAN18000	3/8" Flat Washer	4

Preparation

1. **Attach desired header to the combine. Lock the head to the combine.**
2. **Raise the head off the ground and lower the safety stop on the feeder house cylinder.**
3. **Raise the reel all the way up.**
4. **Set the parking brake on the combine.**
5. **Turn off the combine engine and remove the key.**

Pictorial Parts List

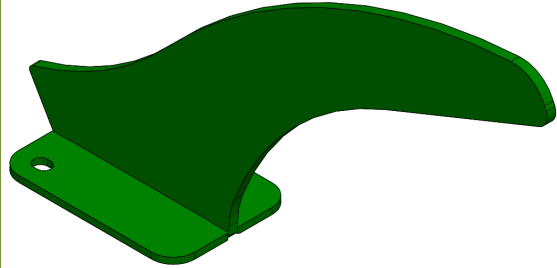


LAN1331SF-W (1)



LANFB305 (2)



LAN1618000 (2)

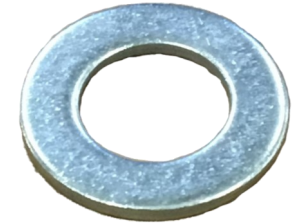

LAN18000 (4)

For further technical assistance,

Call Lankota Inc. at:

1-866-526-5682

Kit Installation

Refer to Figures 1 & 2

1. Find the center of the center canvas. Place the shark fin in front of the canvas at this mark up against the rock guard as shown.
2. Center punch the holes, remove the shark fin and drill out the holes with a 3/8" drill bit.

Figure 2

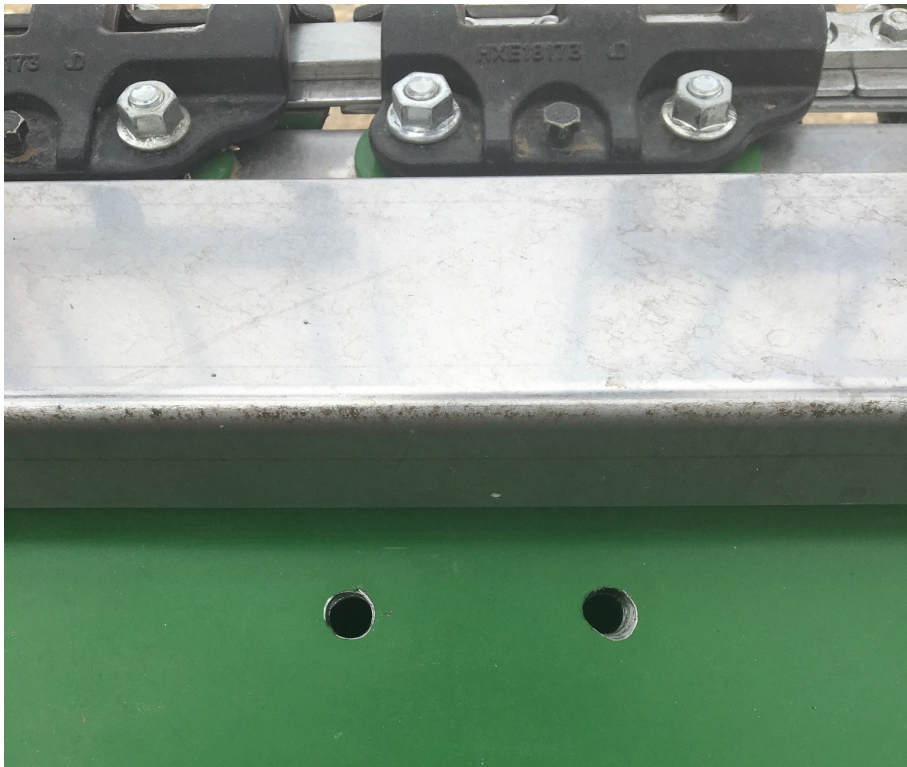


Figure 1



Kit Installation

Refer to Figures 3 & 4

3. Remove the skid plate below the newly drilled holes.

Figure 3



Figure 4



Kit Installation

Refer to Figure 5 & 6

4. Fasten the fin to the head with the supplied 3/8" bolts, washer and nyloc nuts. Tighten.

Figure 5



Figure 6





The Lankota Shark Fin also works well with
the Bean Saver Brush Kit.

