

LANAA106325

Installation Instructions

Lankota Offset Receiver Mount Mast for John Deere DB Planters

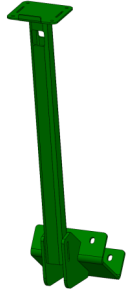
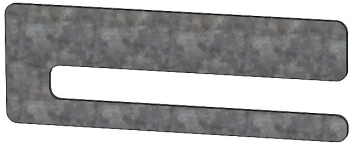
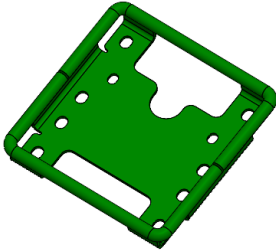


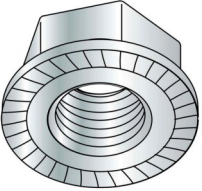
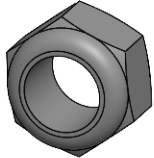
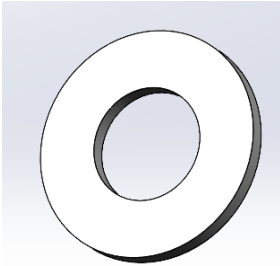

LANKOTA®

**270 West Park Avenue
Huron, SD 57350
866-526-5682**

Numerical Parts List

Part Numbers	Description	Qty
LANGPS916A	JD Offset Receiver Mount Mast	1
LANA85778	GPS Shim Plate	3
LANGPS8119	Starfire Deluxe Shroud Mount	1
LAN9225K75	Vibration-Damping Sandwich Mount with Studs	4
LANH212949	GPS Grommet	2
LAN14M7298	Serrated Flange nut M8-1.25	8
LANF0FQ5	HHCS M12-1.75 X 200, GR. 8.8	2
LANFWS55	SAE Flat Washer	4
LANF0H5N	Nyloc nut M12-1.75	2

Pictorial Parts List

 <p>LANGPS916A (1)</p>	 <p>LANA85778 (3)</p>	 <p>LANGP8119 (1)</p>	 <p>LAN9225K75 (4)</p>	 <p>LANH212949 (2)</p>
 <p>LAN14M7298 (8)</p>	 <p>LANF0FQ5 (2)</p>	 <p>LANFWS55 (4)</p>	 <p>LANF0H5N (2)</p>	

Kit Installation

Refer to Figures 1 & 2

1. Loosely assemble Vibration-Damping Mounts (LAN9225K75) to Starfire Deluxe Shroud Mount (LANGPS8119) using (4) M8-1.25 Serrated Flange nuts (LAN14M7298).
2. Next take JD Offset Receiver Mount Mast (LANGPS916A) and assemble Vibration-Damping Mount (LAN9225K75) & Starfire Deluxe Shroud Mount (LANGPS8119) using (4) M8-1.25 Serrated Flange nuts (LAN14M7298).
3. Tighten Hardware.

Figure 1

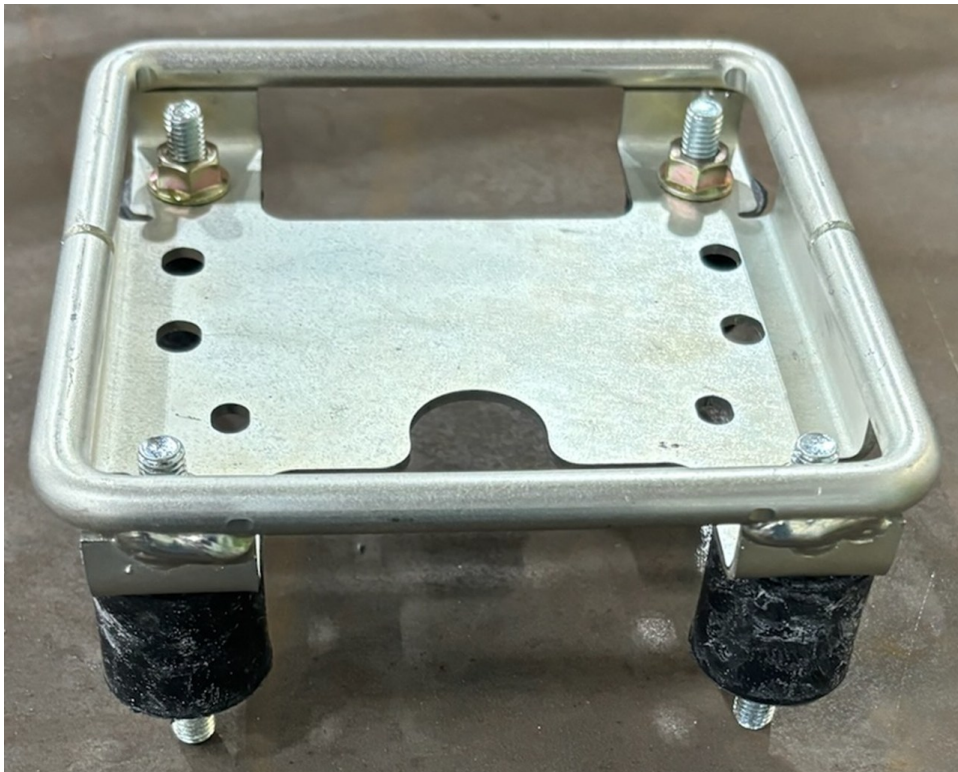


Figure 2



Kit Installation

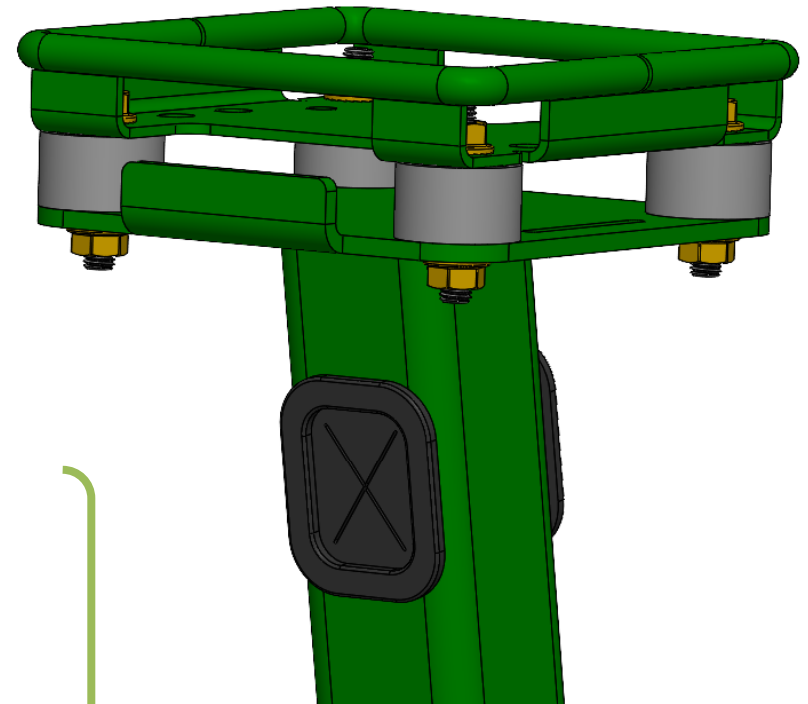
Refer to Figures 3 & 4

4. Take Mast and install on planter using (2) HHCS M12-1.75 x 200 bolts (LANF0FQ5), (4) SAE Flat Washers (LANFWS55) & (2) Nyloc nuts—M12-1.75 (LANF0H5N) through factory holes on rectangular box tube on planter.
5. Route wiring through box tube and out machined rectangular pockets towards top of Mast. Once wiring is in place then install (2) GPS Grommets (LANH212949) into machined pockets.

Figure 3



Figure 4



For further technical
assistance,

Call Lankota Inc. at:

1-866-526-5682