

# **LANGPS21434**

## **Installation Instructions**


**Lankota GPS Adapter for JD Deluxe Shroud on Original Mount**

# **LANKOTA<sup>®</sup>**

**270 West Park Avenue  
Huron, SD 57350  
866-526-5682**

# Parts List

<b>Part Numbers</b>	<b>Description</b>	<b>Qty</b>
LANGPS435	JD Deluxe-on-Original Adapter Weldment	1
LANGPS436	3/8" Bent Pin, Zinc	1
LANFVVP9	Hairpin, 0.073-0.38 x 1.44	1
LANG2027	Rubber Push-in Bumper	4

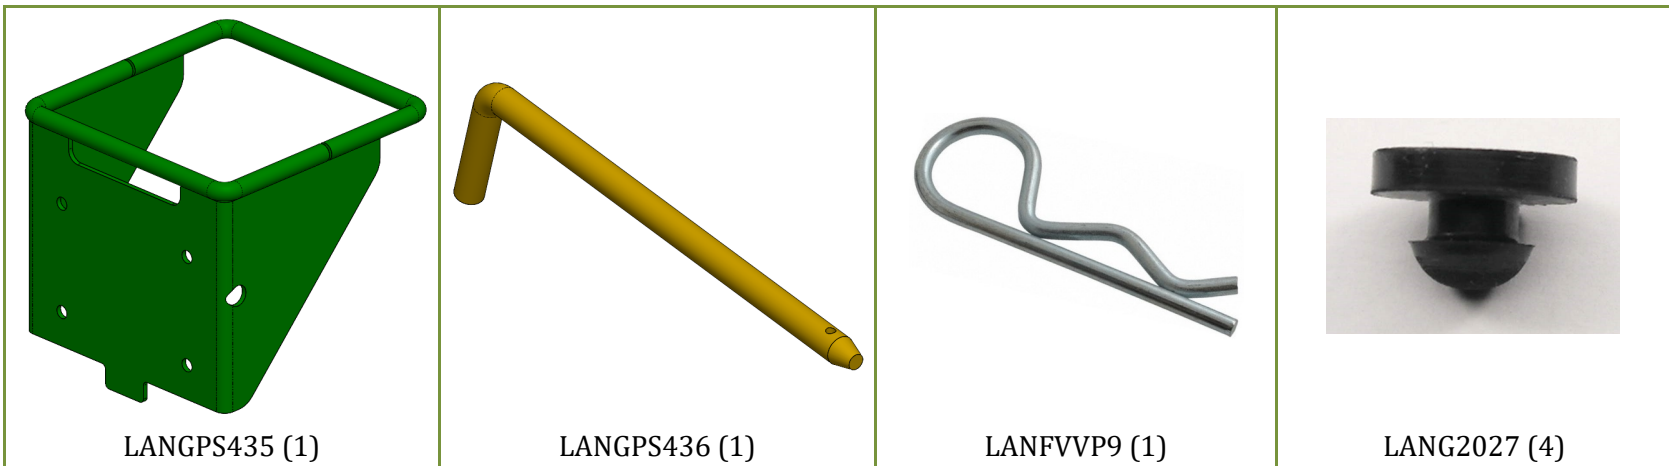

# Kit Installation



Figure 1

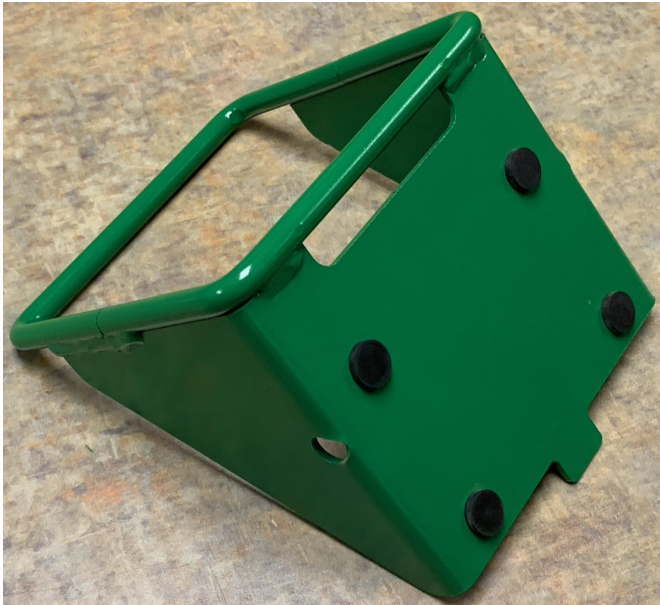


Figure 2

## Refer to Figures 1—3

1. Press the rubber bumpers into the adapter as shown.
2. Test if pin fits in the holes of the original mount. If not, drill out to 29/64" on both sides.

Figure 3



# Kit Installation

Figure 4



Refer to Figures 4—6

4. Slide the bottom tab into the mounts slot.
5. Insert the pin through the mount, adapter and out the other side.
6. Fasten with the hairpin.



Figure 5

For further technical assistance,

Call Lankota Inc. at:

1-866-526-5682

Figure 6

