

LANJDFR120

Installation Instructions

Lankota Foot Rest for John Deere® STS Combines

LANKOTA®

**270 West Park Avenue
Huron, SD 57350
866-526-5682**

Installation

1. Turn off the combine engine and remove the key.

Refer to Figures 1 & 2

2. Clean the floor of combine cab, mainly around and behind the steering column and foot pedals.
3. Pull the floor matt flaps back as shown.

Figure 1



Figure 2



Refer to Figure 3, 4 & 5

4. Remove the two bolts shown, that hold down the steering column. Set them aside for later.
5. Place the foot rest on the metal floor, with the Lankota sticker facing out the windshield and line up the two bolt holes.
6. Insert and tighten the previously removed bolts.

Figure 3



Figure 4



Figure 5



Refer to Figure 6 & 7

7. Fold the rubber flaps back into place.
8. Relax your feet on your new Lankota Foot Rest.

Figure 6

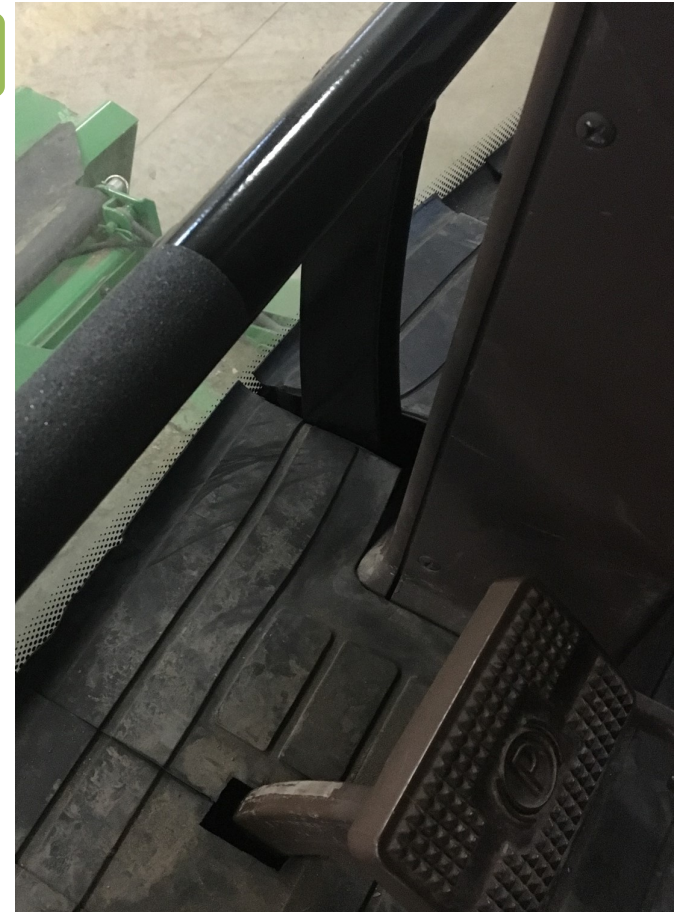


Figure 7

For further technical assistance,

Call Lankota Inc. at:

1-866-526-5682