LANMF5478 Installation Instructions

Mud Flaps for CIH Sprayers with Narrow Fenders (84485478 & 87665204) - (1 Pair)


Fits CIH Models: 3310, 3320, 4420, 3230, 3330, 4430, 2240, 3240, 3340, 4440, 2250 and 5550

LAN COTA

270 West Park Avenue Huron, SD 57350 866-526-5682

Parts List

Part Numbers	Description	Qty
LANMF18	Sprayer Mud Flap Mount	2
LANMF19	Mud Flap Clamp Plate	2
LANMF20	Sprayer Mud Flap (16x24)	2
LANMF26	Mud Flap Fender Washer	4
LANMFBH1	5/16" Mud Flap Bag of Hardware	2
LANF05SP	5/16" SS Flat Washer	10
LANFH8NC	5/16" SS Top Lock Nut	6
LANF06F3	5/16" x 1" SS Hex Bolt	6
LANMFBH2	3/8" Mud Flap Bag of Hardware	1
LANF06FQ	3/8" x 1.5" SS Hex Bolt	4
LANF05SQ	3/8" SS Flat Washer	8
LANF21DD	3/8" SS Top Lock Nut	4

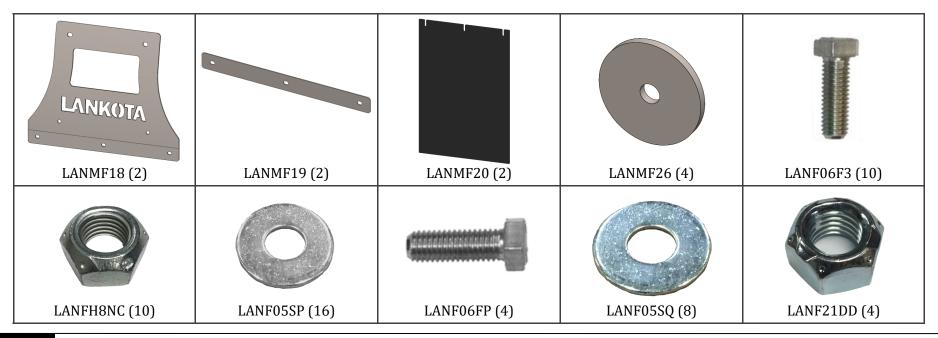

Kit Installation



Refer to Figures 1 - 4

- 1. Remove the hardware and outer plate from the back mount point of the fender.
- 2. Mount the mud flap mount (LANMF18) through the fender to the fender bracket with the 3/8" hardware.
- 3. Using a 11/32" drill bit, through the shown holes, drill holes in the fender.
- Push a 5/16" bolt and washer through the holes.
- 5. Secure them in place with a fender washer (LANMF26) and a 5/16" top lock nut.









3/15/2021

Figure 2

Figure 1

Kit Installation



Figure 5

Refer to Figures 5—7

- 6. Mount the mud flap (LANMF20) to the mount with the 5/16" hardware and clamp plate (LANMF19).
- 7. Tighten all hardware.
- 8. Repeat on other wheel.



Figure 6

WARRANTY STATEMENT

Lankota Warranty only covers products produced by LANKOTA and does not cover parts made and/or sold by other aftermarket manufacturers, or the original manufacturer, or that were part of the original equipment's construction.

