

LANMFKK36656

Installation Instructions

Mud Flaps for 4630, 4720, 4730, 4830 & R4023 JD Sprayers with Narrow Fenders (N308703 or KK36656)

(1 Pair)


LANKOTA®

270 West Park Avenue
Huron, SD 57350
866-526-5682


Numerical Parts List

Part Numbers	Description	Qty
LANMF11	Sprayer Mud Flap Mount	2
LANMF12	Mud Flap Clamp Plate	2
LANMF13	Sprayer Mud Flap (19x24)	2
LANMFBH1	5/16" Mud Flap Bag of Hardware	2
LANF05SP	5/16" Stainless Flat Washer	10
LANFH8NC	5/16" Stainless Top Lock Nut	6
LANF06F3	5/16" x 1" Stainless Hex Bolt	6

Pictorial Parts List

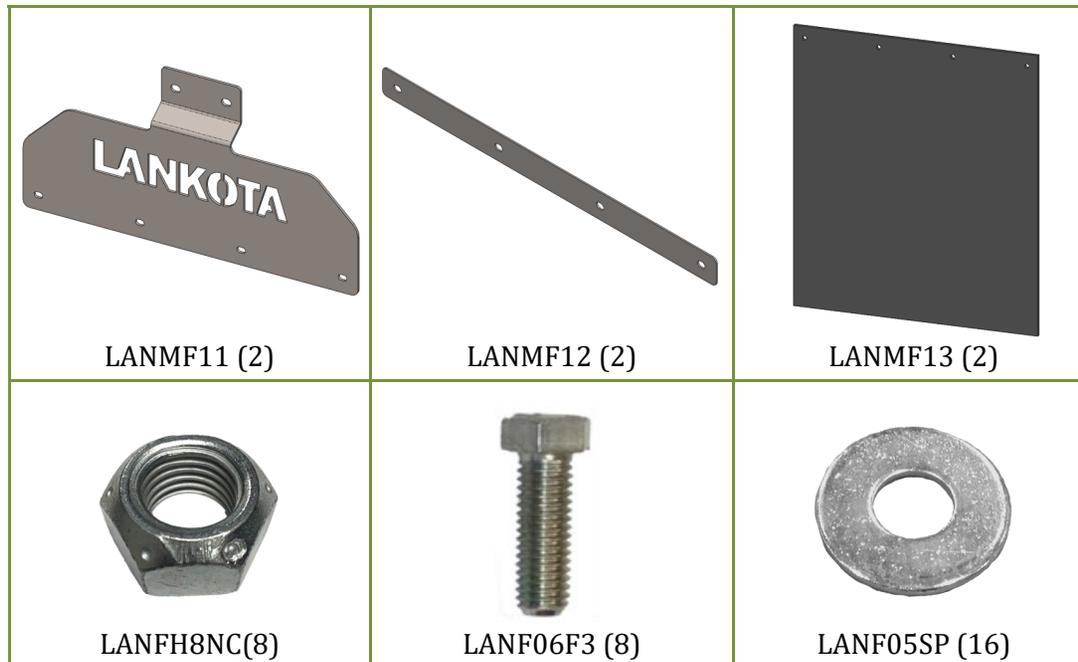


Kit Installation

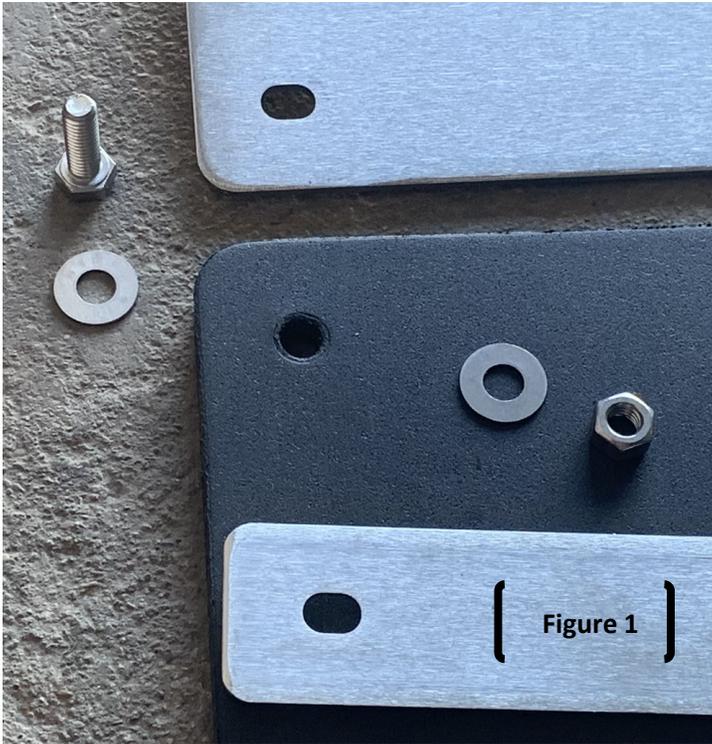

Refer to Figures 1 - 4

1. Assemble the mud flaps as shown in the figures and tighten.

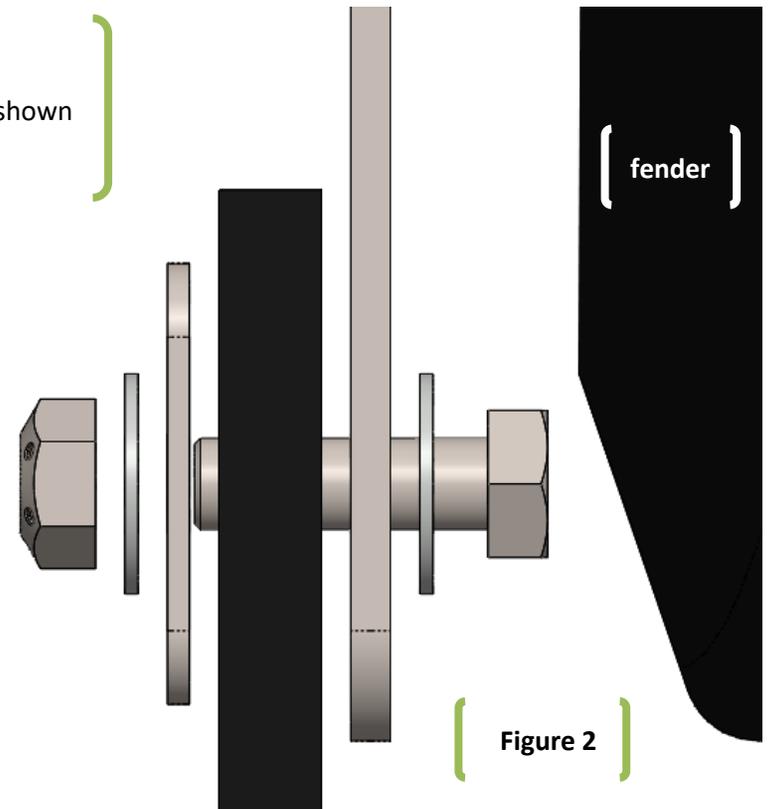

Kit Installation

Refer to Figures 5 & 6

4. Remove the lower mounting hardware from the fender.
5. Discard the clamp plate.
6. Reuse the hardware and mount the mud flap assembly.



Figure 5



Figure 6

WARRANTY STATEMENT

Lankota Warranty only covers products produced by LANKOTA and does not cover parts made and/or sold by other aftermarket manufacturers, or the original manufacturer, or that were part of the original equipment's construction.