

LANPSP40577

Installation Instructions

John Deere 30" Row Poly Corn Head Hood Corner Protectors

LANKOTA®

270 West Park Avenue
Huron, SD 57350
866-526-5682

Numerical Parts List

Part Numbers	Description	Qty
LANPSP405R	Stainless Steel Corner Shield	1
LANPSP405L	Stainless Steel Corner Shield	1
LANSSCRPBH	Bag of Hardware	2
LAN030114048	3/4" Philips Pan Head Screw	12
LAN030112032	1/2" Philips Pan Head Screw	6

Pictorial Parts List



Kit Installation

Refer to Figure 1-2

1. Either completely remove the hood and snout assembly from head or raise hood and snout assembly to maintenance/storage position.
2. Fit the stainless steel corner shield (LANPSP405R) into position as shown in Figures 1 & 2.
3. Install eight larger screws (LAN030114048) in the order indicated in Figures 1 & 2. Hold UP and IN when installing screws 1 & 2. Hold the small end UP and IN when installing screws 5 & 6. Then press down firmly while installing screws 7 & 8.
4. Install three smaller side screws (LAN030112032) into the small side of the plate.

Note: A battery powered drill works great, but use on a very low setting and hand tighten a few screws until the adequate setting on the drill is found without stripping the poly.

Refer to Figure 3

5. Repeat steps 2 - 4 on the opposite side of the header with the opposite shield (LANPSP405L).
6. Lower hoods back to operating position or reinstall if removed from head in step 1.
7. Hoods should have no obstruction with gathering chain tracks.

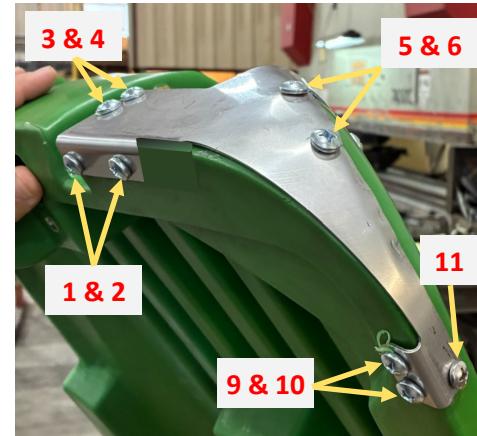


Figure 1

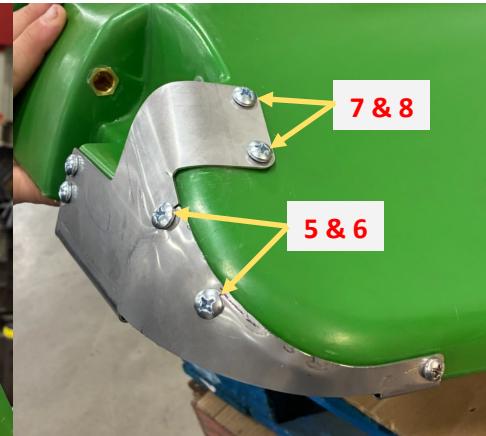


Figure 2



Figure 3

For further technical assistance,

Call Lankota Inc. at:

1-866-526-5682