

LANSF21552

Installation Instructions

Lankota Shark Fin for MacDon and Case IH Flex Draper 240 & 245 Heads

LANKOTA®

270 West Park Avenue

Huron, SD 57350

866-526-5682



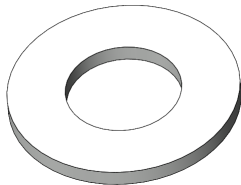
Numerical Parts List

Part Numbers	Description	Qty
LANSF215A	Shark Fin Case IH Mac Don	1
LAN201027	HHCS—M8-1.25 X 25, Gr. 8.8	1
LANFWS52	SAE Flat Washer	1

Preparation

1. Attach desired header to the combine. Lock the head to the combine.
2. Raise the head off the ground and lower the safety stop on the feeder house cylinder.
3. Raise the reel all the way up.
4. Set the parking brake on the combine.
5. Turn off the combine engine and remove the key.

Pictorial Parts List

		
LANSF215A (1)	LAN201027 (1)	LANFWS52 (1)

**For further technical assistance,
Call Lankota Inc. at:
1-866-526-5682**

Kit Installation

Refer to Figure 1

1. Clean the center of the head between the center canvas and the sickle bar. Expose the two center nuts and centered bolt holding down factory bean saver.
2. Remove the shown nuts and bolt. Retain nuts to be used later.

Figure 1



Kit Installation

Refer to Figures 2 & 3

3. Install the shark fin and fasten down with the factory tapered allen head bolts and flange nuts.
4. Take M8-1.25 x 25mm bolt (LAN201027) and SAE flat washer (LANFWS52) and install through single bolt hole location.
5. Ensure Shark Fin (LANSF215A) is centered and tighten hardware.



Figure 2



Figure 3

Kit Installation

