

# **LANSFMC10**

## **Installation Instructions**

**Lankota Shark Fin for MacDon and Case IH Flex Draper Heads**

# **LANKOTA<sup>®</sup>**

**270 West Park Avenue  
Huron, SD 57350  
866-526-5682**

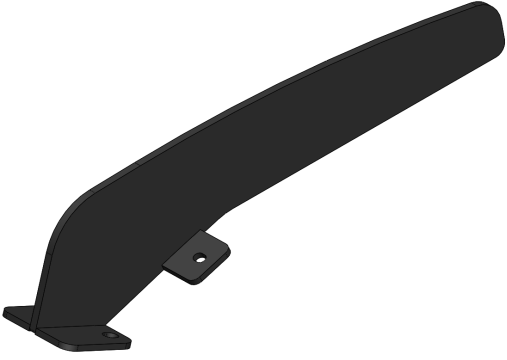



# Numerical Parts List

<b>Part Numbers</b>	<b>Description</b>	<b>Qty</b>
LANSFMC10W	Shark Fin for MacDon & CIH	1
LAN18A	3/8" x 1.0" Carriage Bolt	2
LAN3718	3/8" Serrated Flange Nut	2
LAN93314A	1/4"-14 x 1.0" Self-Tapping Hex Screw	2

# Preparation

1. **Attach desired header to the combine. Lock the head to the combine.**
2. **Raise the head off the ground and lower the safety stop on the feeder house cylinder.**
3. **Raise the reel all the way up.**
4. **Set the parking brake on the combine.**
5. **Turn off the combine engine and remove the key.**

# Pictorial Parts List

			
LANSFMC10W (1)	LAN18A (2)	LAN3718 (2)	LAN93314A (2)

**For further technical assistance,  
Call Lankota Inc. at:  
1-866-526-5682**

# Kit Installation

**Refer to Figures 1 & 2**

1. Clean the center of the head between the center canvas and the sickle bar. Expose the two center nuts.
2. Remove the shown nuts and their carriage bolts.

**Figure 1**



**Figure 2**





# Kit Installation

## Refer to Figures 3 & 4

3. Replace the hardware with the provided carriage bolts (LAN18A).
4. Install the shark fin and retain with the 3/8" nuts (LAN3718).
5. Square the fin with the head by eye and tighten the bolts.



Figure 3



Figure 4



# Kit Installation

Refer to Figures 5 & 6

6. Install the 1/4" self-tapping screws (LAN93314A) and tighten.



Figure 5



Figure 6



# Kit Installation

