

LANSR26402

Installation Instructions

Lankota Stalk Roller Lift Kit for CIH Quadtrac (420, 470), Rowtrac (400, 420, 450, 470, 500) & Wheeled (350, 370, 400, 420, 450, 470) Tractors & NH T.9 Smart Trax II & Wheeled Tractors


LANKOTA®

**270 West Park Avenue
Huron, SD 57350
866-526-5682**

Numerical Parts List

<u>Part Numbers</u>	<u>Description</u>	<u>Qty</u>
LANSR068	Stalk Roller Lift Plate	2
REDB712	5/8"-11 X 3" Grade 5 Hex Head Bolt	4

Pictorial Parts List

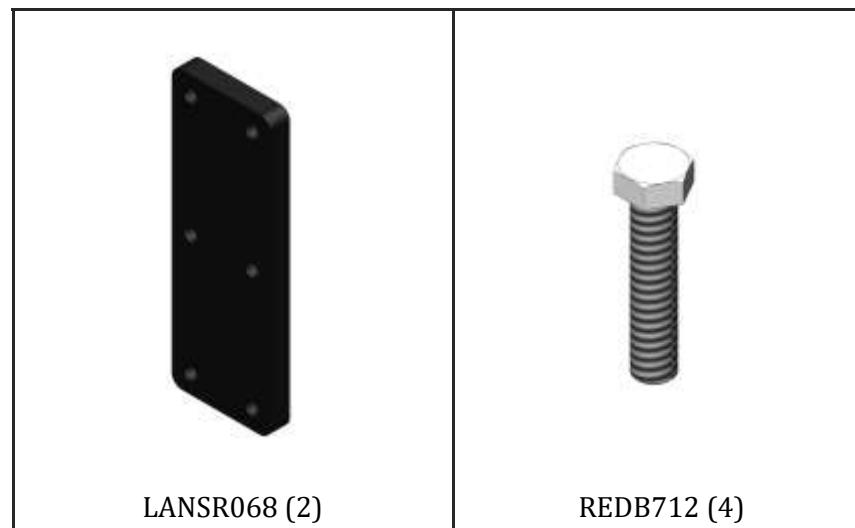

LANSR068 (2)

REDB712 (4)

Kit Installation

Refer to Figure 1 & 2

1. Install the Stalk Roller Lift Plates (LANSR068) between the Tractor Main Mounts and the Stalk Roller Mount Frame (Included in your Lankota Stalk Roller kit—LANSR005) using the existing hardware and the included 5/8"-11 x 3" Hex Head Bolts (REDB712) in the location indicated with the red arrows.
2. Tighten all hardware.



Figure 1

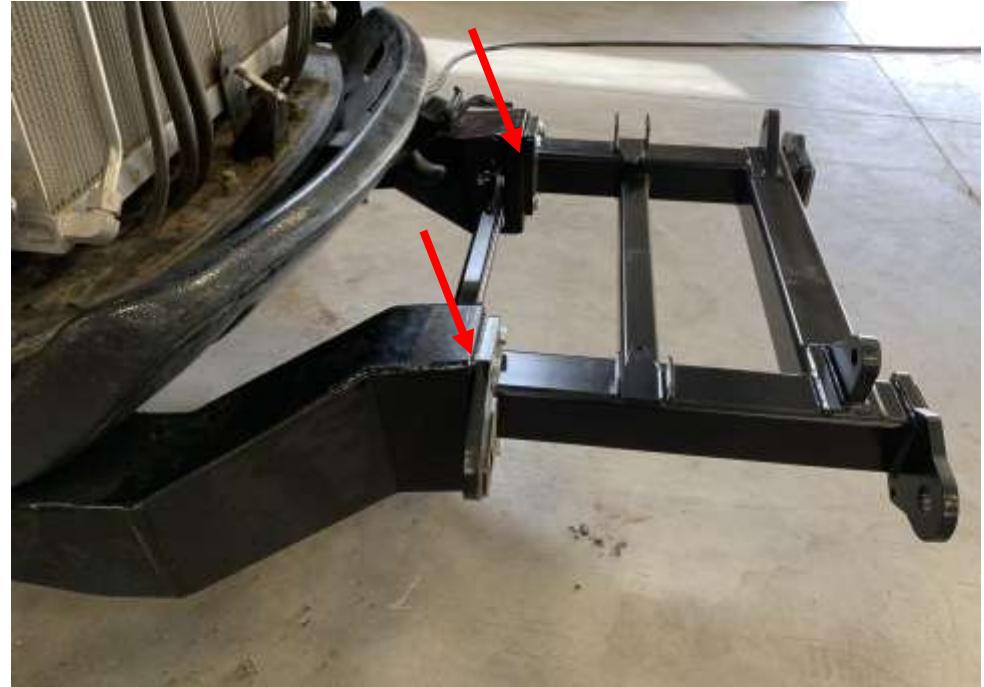


Figure 2

Headlight Clearance Consideration

Refer to Figures A, B & C

If additional light clearance is required, install cylinder stops (LANSCA-1) as necessary (one or two) on each cylinder to hold the roller arms away from the lights.

Note: The cylinder stops will need to be removed in order to utilize the storage pin position (See Figure C).

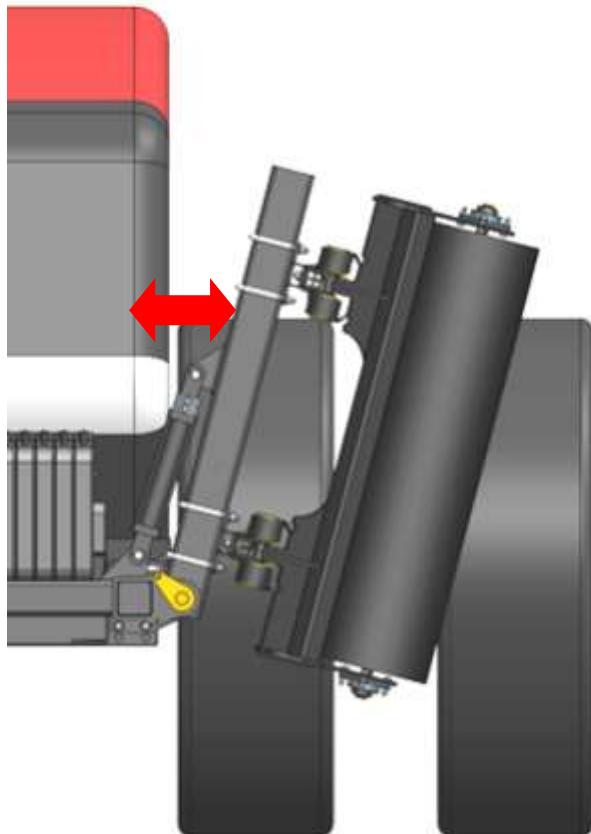


Figure B

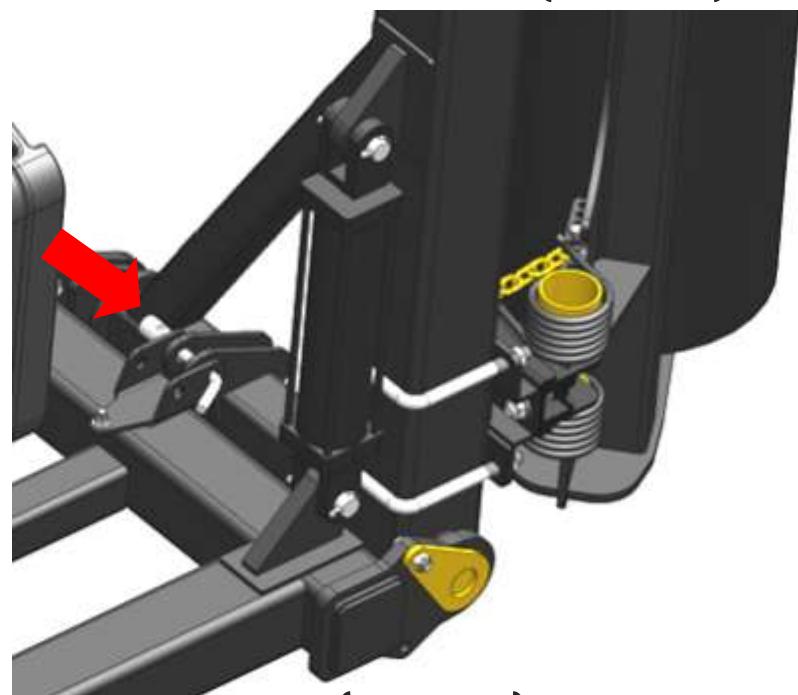


Figure C



Figure A



For further technical assistance,

Call Lankota Inc. at:

1-866-526-5682