

# **LANTC95152**

## **Installation Instructions**

**Lankota Tow Cable Kit for:  
CIH® 715 Quadtrac and Rowtrac**

# **LANKOTA®**

**270 West Park Avenue  
Huron, SD 57350  
866-526-5682**

# Numerical Parts List - Common Parts

Part Numbers	Description	Qty
LAN-CIHTC101	Cable Anchor Weldment	1
LAN-CIHTC102	Cable Anchor Top Plate	1
LAN-CIHTC103	Front Differential Cable Plate	1
LAN-CIHTC103A	Spacer	4
LAN-CIHTC206	CIH Tow Cable Storage Pin	1
LANTC157	Tow Cable	1
LANTC207	Front Differential Cable Guide Link	1
LANTC208	1-1/4" Cable Shackle	1
LANTC209	1-3/8" Cable Shackle	1
LAN8RTC006BLK	Cable Clamp	2
RED21940	7/16" X 2 Lynch Pin	1
LANF-HHCS-M24-80	M24 X 80 Bolt	6
LANF-HHCS-M20-100	M20 x 100 Bolt	4
LANF-FW-M24	M24 Flat Washer	6
LANF-FW-M20	M20 Flat Washer	4
LANFM7KV	Serrated Flange Bolt—3/8x 1	2
LAN3718	Serrated Flange Nut—3/8	2

# Pictorial Parts List - Common Parts

					
LAN-CIHTC103 (1)	LAN-CIHTC103A (4)	LANTC157 (1)	LANTC207 (1)	LANTC208 (1)	LANTC209 (1)
					
LAN-CIHTC101 (1)	LAN-CIHTC102 (1)	LAN-CIHTC206 (1)	RED21940 (1)	LANF-HHCS-M24-80 (6)	LANF-FW-M24 (6)
					
LANF-HHCS-M20-100 (4)	LANF-FW-M20 (4)	LAN8RTC006 (2)	LANFM7KV (2)	LAN3718 (2)	

# 1. Tow Point Installation

## Refer to Figure 1.1 - 1.3

1. Install (LAN-CIHTC101 & LAN-CIHTC102) in front of drawbar with taper of mount facing towards front of tractor. Clean out rear housing and install LAN-CIHTC102 above frame (sliding in from rear).
2. Bolt LAN-CIHTC101 to LAN-CIHTC102 using the (6) M24 x 80 Bolts and (6) M24 Washers.
3. Attach cable to rear mounting plate using LANTC209 with the washers on the cable toward the rear of the tractor.



Figure 1.1



Figure 1.2



Figure 1.3

## 5. Cable Guide Installation

Refer to Figure 2.1 - 2.3

4. Install the front guide (LAN-CIHTC103 & LANTC207) on the front of the differential as shown in Figure 5.1. Use LANCIHTC103A spacers if necessary (**375 Standard Axle**). **Note: blow dirt out of the tapped holes first.**
5. Connect the cable (LANTC157) using shackle LANTC208 to front differential link LANTC207. Place the cable clamps (LAN8RTC006BLK) on the front side of the shackle and tighten cable to a good functioning tension. Use the 3/8 serrated flange bolts and nuts (LANFM7KV and LAN3718) to tighten the cable.


Figure 2.1



Figure 2.2



Figure 2.3

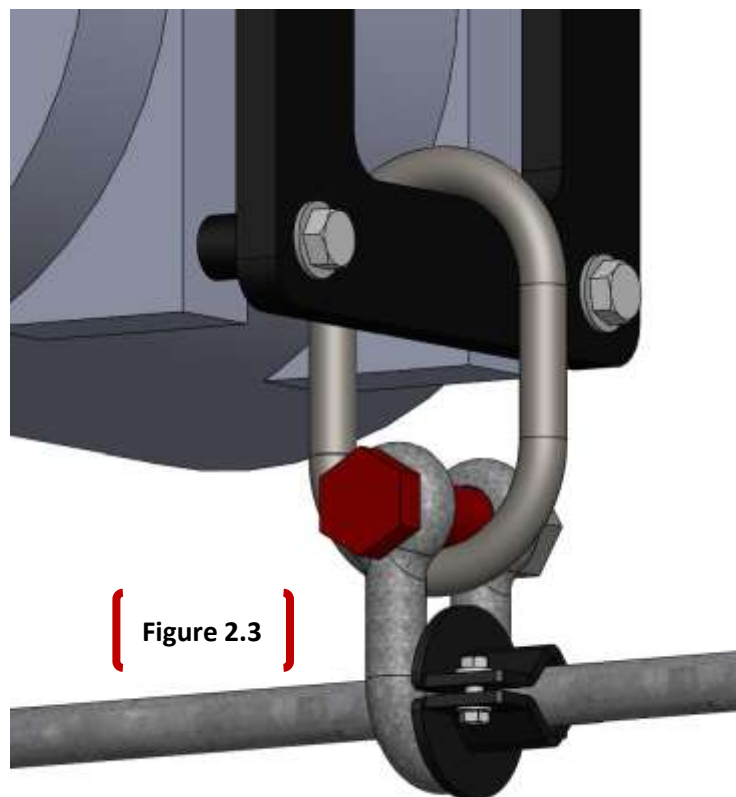

# 1. Storage Pin Installation

**Refer to Figures 3.1 & 3.2**

6. Mount cable to front storage area by running Storage Pin (LAN-CIHTC206) through cable eye and through hole in front weight plate.
7. Secure storage pin with Lynch Pin (RED21940).



**Figure 3.2**



**Figure 3.1**

**For further technical assistance,**

**Call Lankota Inc. at:**

**1-866-526-5682**